

HOW LONG TO USE

- 1 Depending on the oil chosen, oils can be diffused for as little as 5 minutes and as long as continuous use, depending on the oil. Please refer to the Essential Oils User's Guide for directions on aromatic use (diffusing).
- 2 The size of the room may require increased or decreased diffusing time to achieve the desired effect.

TROUBLESHOOTING

When the diffuser is functioning properly and cleaned regularly, you can see oil being projected through the metal jet into the glass nebulizer. You may be able to see oil misting out of the top of the glass nebulizer, depending on the thickness and consistency of the oil. If you cannot see oil misting out of the top of the metal jet, please check the following. If these don't work, clean the diffuser.

NO AIR OUTPUT Be sure the pump is plugged into an active powerpoint, tubing is attached and the on/off knob is turned on.

NOT ENOUGH OIL IN THE WELL If it appears there may not be enough oil in the well, simply add 5-6 drops of oil to the well. The oil should begin to diffuse again immediately.

JET IS CLOGGED First, unplug the pump from the powerpoint. Remove the glass nebulizer off the metal jet. Poke a straight pin down into the hole on the top of the metal jet. This should remove any debris that may be clogging the jet.

www.youngliving.com.au

e&oe AU200708



essential oil diffuser

Aromatic benefits for every home + season

Please read all instructions before use.

WHICH OIL TO USE

- 1 Any undiluted essential oil can be used. NOTE: Thicker oils will diffuse more slowly than thinner oils.
- 2 Never attempt to diffuse essential oils that have been diluted with water or any other substance, such as V-6™ Enhanced Vegetable Oil Complex, massage oils or other vegetable-based oils. This could clog the diffuser's jet and possibly alter the oil's effects.
- 3 Avoid diffusing two or more blends at the same time, as this may change the desired results.
- 4 Several single oils can be mixed together to create your own unique blend.
- 5 If you desire to diffuse an oil other than what is currently in your diffuser, simply allow the first oil to be completely diffused, or remove the remaining oil with the dropper and return it to its original bottle. Then add the new oil.

CONTENTS

Oil well base (A) Well (B) Metal jet (C) Glass Nebulizer (D)
Clear plastic tubing (E) Pump (F) Air pump outlets (G) Air inlet (H)
On/off and airflow control knob (I) T piece for tubing (J)
Electrical cord (not shown) Dropper (not shown)

ASSEMBLY

- 1 Carefully remove parts from the packaging, including the plastic tubing (E) and T piece (J) located underneath the cardboard insert.
- 2 Join the T piece (J) onto one end of the clear plastic tubing (E) and connect the two short sections of tube next to the T piece to the two air pump outlets (G).
- 3 Connect the other end of the clear plastic tubing (E) to the air inlet (H) of the oil well base.
- 4 Place the glass nebulizer (D) over the metal jet (C) located inside the oil well base (A).

CAUTIONS

- 1 The glass nebulizer should always be placed over the metal jet before starting the diffuser.
- 2 Low-grade oils or perfume essences may clog the air jet.
- 3 The diffuser should be placed on a steady surface that is protected in case spills occur.

OPERATING INSTRUCTIONS

- 1 Place your assembled diffuser on a hard, flat surface (eg., counter, table). The clear plastic tubing provided is quite long; if you wish, you may set the pump on the floor or under a table so that it is out of sight.
- 2 Using the dropper provided or dropping straight from your essential oil bottle, pour 15-20 drops of your desired essential oil into the well (B) approximately half a centimetre deep. NOTE: You may wish to place the bottle of essential oil upside down in the well located next to the nebulizer. When doing so, be sure that the plastic orifice (drop reducer located at the mouth of the essential oil bottle) is still in the bottle opening.
- 3 Plug the electrical cord into a wall outlet.
- 4 Turn the knob (I) on and turn it to adjust the amount of oil dispersed into the air to suit your needs.

CLEANING YOUR DIFFUSER

- 1 Disconnect the plastic tubing from the air inlet on the oil well base (H) so that the parts you are going to clean are removed from the pump and tubing. Do not wet the pump.
- 2 Remove the glass nebulizer. Clean the nebulizer, metal jet and inside of the well with soapy water, diluted Thieves® Cleaner or rubbing alcohol. Let all parts air dry completely, or use a blow dryer on low heat for quicker drying.
- 3 When all parts are completely dry, reassemble, reconnect the tubing and resume use of the diffuser with your essential oil of choice.

